

## INSTRUCTIONS

### FUNCTION

The Extra Grip Chock enhances trailer occupant comfort by preventing the tandem wheels from moving. When the wheels are chocked, the annoying rocking motion is eliminated to a very large extent.

### THINGS TO AVOID



Do not over tighten this wheel chock, damage can be done to the wheel or the Extra Grip chock. This damage is not covered by the warranty.



**NOTE** : Do not rely on this Extra Grip Chock as a brake. While it will assist in preventing in the movement of the wheels other independent device such as blocks or wedges should also be used

### OPERATION / ADJUSTMENT

As the drawing shows, the Extra Grip chock is to be positioned between the tandem wheels at the centerline of the wheel. It functions by pressing a fixed distance outward (side to side) against the two wheels, locking one wheel to the other. Your Extra Grip Chock is adjustable for tandem wheel spacing from approximately 1" – 10 1/2". The adjustment is accomplished by turning the nut with the ratchet wrench, included, on the threaded rod protruding from the bottom of the unit. When the unit is its narrowest position it will not function. To adjust the width the first step is to pull the unit apart (wider). The threaded rod will then protrude further, exposing more threads between the chock and the \*adjusting nut. Hand tighten the \*adjusting nut clockwise. Use the ratchet wrench for final tightening. A padlock is provided to lock the Extra Grip Chock, slip the padlock trough adjustment washer after tightening bolt to discourage theft of the trailer or wheel chock

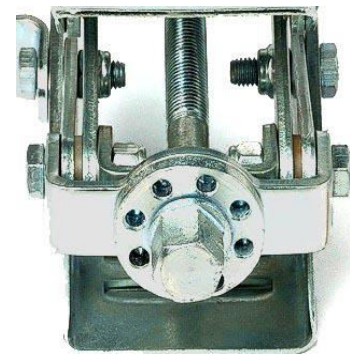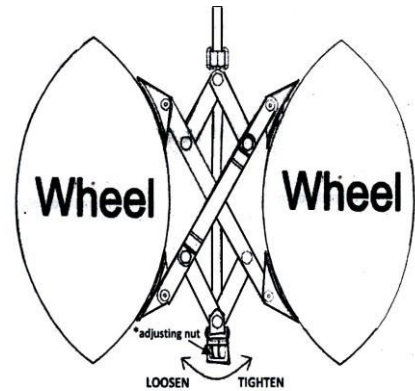

### STIFFNESS

The footpads may be a little stiff in movement. Working the piece open and closed over for a few times will normally correct this.

### TIRES

The performance of the Extra Grip Chock is dependent on proper trailer tire pressures. Check tire pressures frequently for safety, good tire tread will result in good chock performance.

### SERVICE

There is no specific service required of your Extra Grip Chock. A little light lubricant on the pivots from time to time will enhance useful life.

### WARRANTY

PRIME STEELS INC., warrants that this product will be free from defects in material and workmanship for the lifetime of the original purchaser. Should a failure to conform to this warranty appear, PRIME STEELS INC. shall upon notification thereof, and proof of purchase, correct such non-conformity, at our option, by repair or replacement / FOB our factory of the defective parts.



**PRIME STEELS INC.**

## **LIFETIME LIMITED WARRANTY**

**TIRE CARRIER, FOOT PADS, QUICK PINS, TRIPODS, QUICK SUPPORTS, CHOCK LOCKS, SCISSOR JACKS, STACKER JACKS, SPREED SOCKET, LOCKING CUP AND TONGUE JACK CASTER WHEEL AND FOOT PADS**

### **THE MANUFACTURER NAMED BELOW MAKES THE FOLLOWING WARRANTY WITH RESPECT TO THE ABOVE PRIME STEELS PRODUCTS**

1. The Warranty is made only to the first Purchase (hereinafter called the "Original Purchaser") who acquires this product for their own use.
2. This warranty will be in effect for the lifetime from the date of purchase by the Original Purchaser. It is suggested that the Original Purchase retain a copy of the dated bill of sale as proof of the date of purchase.
3. This warranty cover only specified parts which shall be free defects in material and workmanship under normal use. This warranty does not cover conditions unrelated to the material and workmanship of the product. Such unrelated conditions include, but are not limited to (a) faulty installations and any damage resulting from such; (b) the need for normal maintenance and nay damage resulting from the failure to provide such maintenance; (c) failure to follow Manufacturer's instructions for use of this product, and (d) any accident to, or misuse of, any part of this product and any alteration by anyone other than the Manufacturer or its authorized representative.
4. In order to obtain the benefits of this Warranty, you should return the product which you find defective to the Manufacturer named below during the period that this Warranty is in effect. All change incurred in delivery of the product to the Manufacturer, and in picking it up after the warranty service has been completed, must be paid by the Original Purchaser.
5. Any item returned in the manner described in paragraph 4 will be examined by the Manufacturer. If it is found that the returned item was defective in material or workmanship, the Manufacturer will repair it without charge for material and labor.
6. Prime steels will pay freight on replacement parts during the first 90 days of ownership by the Original Purchaser.
7. The Manufacturer does not authorize any person or company to create any Warranty obligation or liability on their behalf.
8. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SOME STATES DO NOT ALLOWTH EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMINATION OR EXCLUSION MAY NOT APPLY TO YOU.
9. ANY IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR ANY PURPOSE, IS LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
10. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, ANY YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.



**PRIME STEELS INC.**

22503 KATY FWY, STE # 38, KATY, TX 77450

[www.primesteelsinc.com](http://www.primesteelsinc.com).

TIME TRUSTED QUALITY FROM PRIME STEEL.